
## MINIMUM CLEARANCE FOR SERVICES FIGURE 3B

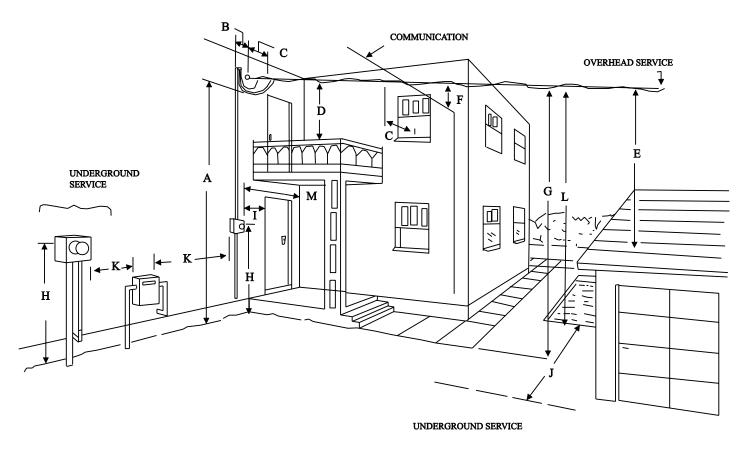

## GENERAL NOTES:

- 1. The service weatherhead is to be located no lower than the service attachment point to insure a positive drip loop.
- 2. Contact your Company representative for entrance and meter location. The Company will refuse connection to any service entrance not installed in an approved location.
- 3. The customer shall install a suitable service attachment point to obtain proper ground clearance.
- 4. Service entrance conductors must be in conduit.